

# Paraben's Device Seizure Toolbox

The Device Seizure Toolbox includes the following:

Connection	Cable Number	Device Type	Compatible Series
USB	SIM	GSM	GSM SIM Cards
USB	iPhone	iPhone	Phone, iPod Touch
Serial	NKI CA-45	Nokia	1100, 1112, 1600, 2310, 2600, 2610, 2626, 6030, 6060
USB	IDEN-1	iDEN	i205, i215, i265, i275, 285, i305, i315, i325, i355, i415, i450, i455, i530, i560, i580, i605, i670, i710, i730, i733, i736, i760, i830, i833, i835, i836, i850, i855, i857, i860, i870, i875, i880, i885, i920, i930
USB	NKI CA-45	Nokia	1110, 1112, 1600, 2310, 2600, 2610, 2626, 6030, 6060, 6061, 6066 (CDMA)
USB	NKI DKU-2	Nokia	3230, 3250, 3300, 6085, 6111, 6125, 6126, 6131, 6136, 6151, 6155, 6170, 6230, 6233, 6235, 6236, 6255, 6256, 6260, 6265, 6270, 6280, 6282, 6288, 6620, 6630, 6650, 6670, 6680, 6681, 6682, 7070, 7270, 7370, 7373, 7600, 7610, 7710, 9300, 9500, 3155i, 5500 Sport, 6155i, 6230i, 6235i, 6236i, 6255i, 6256i, 6265i, 6275i CDMA, 6670v, 9300i, 9500 Communicator, E50, E60, E61, E61i, E65, E70, N70, N71, N72, N73, N80, N90, N91, N92, N93, N93i
USB	NKI DKU-5	Nokia	2112, 2115, 2270, 2272, 2280, 2285 (CDMA), 3100, 3105, 3108, 3120, 3125, 3200, 3205, 3220, 3585 (CDMA), 3586, 3587, 3588, 5070, 5100, 5140, 6012, 6015, 6020, 6021, 6070, 6080, 6100, 6101, 6103, 6108, 6200, 6220, 6225, 6560, 6585, 6610, 6800, 6810, 6820, 6822, 7200, 7210, 7250, 7260, 7360, 2115i, 2116i, 2125i, 2126i, 2285 (CDMA), 3585 (CDMA), 3585i, 3586i, 3587i, 3588i, 3589i, 5140i, 6011i, 6015i, 6016i, 6019i, 6585i, 6610i, 7250i, & BB5 Models: 6681, N71, N90, N70, 6630, 6680
Serial	ERI T68	Ericsson	T28, T68, T300, T610, P800, Ericsson: T20e, T20s, T20c, T28, T28 World, T29, R380e, R600, P800, T61g, T62u, T200, T300, T610, T630, Z600, P900, F500i, K700, K700i
Serial	ERI T28	Ericsson	T28, T28S, T28SC, T610, K608i, K700, A2618S, R320S, R310S, A2628s, 237, 337, 388, 398, 628, 788, 988
Serial	SIE AM601 MDJ6	Siemens	Siemens C25 Tip: 3118, A35, A36, C25, C35, C45, M35, M35i, M50, ME45, MT50, S25, S35, S45, SL-42, SL45, 6688 Siemens C30 Tip: C30, S30, M30 Siemens C55 Tip: A50, A55, C55, C60, C62, M50, M55, S55, M56, MC60, ME45, MT50 Siemens S40 Tip: S40, S42
USB	MOT V66 (2)	Motorola	270c, A1000, A630, A830, A835, A845, A920, C331t, C343, C353t, C390, c975, c980, E1000, E1070, E398, E550, M BUS, T720, T720i, T721, T722i, T730, V120, V120c, V260, V262, V265, V300, V400, V500, V505, V525, V545, V547, V550, V551, V60, V600, V620, V635, V60i, V60p, V60s, v60t, V620, V66, V70, V710, V80, V800, V975, V980, V1050
USB	MINI-USB	Various	Standard Mini-USB cable used in many handheld devices.
USB	MICRO-USB	Various	Standard Micro-USB cable used in many handheld devices.
Serial	Garmin	Garmin	EMAP, ETREX (YELLOW), ETREX CAMO, ETREX H, ETREX LEGEND, ETREX SUMMIT, ETREX VENTURE, ETREX VISTA, GEKO 201, GEKO 301, GOLF GPS
USB	IPAQ-1	iPAQ	3100, 3600, 3700
USB	Palm-5	Palm	700, Lifedrive, t5, Treo 650, 680, 700, 750, 755 Tungsten e2, tx, z22
USB	CLIE-2	Sony Clie	All T series Clie
USB	IPAQ-2	iPAQ	3800, 3900, 3955, 3975, 1900, 1910, h1910, 5400, 5455, h1935, h1940, h1945, h2210, h2215, h2212e, h4150, h4155, h4350, h4355, h5150, h5455, h5550, h5555
USB	Dell-2	Dell	AXIM X50, X50U, X50V
USB	SAM-N191	Samsung	1300, A310, A399, A460, A530, A530s, A600, A610, A620, A650, A660, A670, A680, A700, A740, A760, A890, D500, D510, D600, E340, E350, E360, E370, E380, E640, E730, E760, E770, E860v, N191, P730, X120, X150, X199, X319, X630, X660, X670, X700, X800

Connection	Cable Number	Device Type	Compatible Series
USB	SAM-M300	Samsung	A117, A127, A137, A167, A177, A227, A237, Magnet A257, Fin / Helio Fin / SPH-A513, A517, Helio Mysto SPH-A523, A637, A737, SLM A747, Propel A767, A777, Access A827, Rugby A837, Eternity A867, Impression A877, Solstice A887, Ace SPH-i325, BlackJack II SGH-i617, Propel Pro SGH-i627, Jack SGH-i637, Saga SCH-i770, Omnia SGH-i900, Epix SGH-i907, Omnia SCH-i910, M300, M305, M310 / Virgin Mobile Slash, M510, M520, Instinct SPH-M800, Instinct S30 SPH-M810, Spex R210A, R211, R300, Byline R310, Axle R311, R400, R410, Tint R420, MyShot R430, Hue SCH-R500, Trill SCH-R520, Jetset SCH-R550, Hue II SCH-R600, R610, Delve SCH-R800, Finesse, R810, T109, T119, T229, T239, T339, T349, T409, T429, T439, Gravity T459, Gravity 2 T469, Beat T539, Comeback T559, T639, T659, Blast T729, Katalyst T739, Highlight T749, T819, Behold T919, Memoir T929, Smooth SCH-U350, U430 / SCH-U430, Cleo SCH-U440, Gloss SCH-U440, Strut SCH-U440, Intensity SCH-U450, Juke SCH-U470, Trance SCH-U490, Convoy SCH-U640, Sway / SCH-U650, SGH-U700, Gleam / SCH-U700, Muse / SCH-U706, Alias 2 / SCH-U750, Renown SCH-U810, FlipShot SCH-U900, Glyde SCH-U940, Rogue SCH-U960, Z400 / SPH-Z400
USB	SAM-T100	Samsung	C100, D41x C20x, DCU-60 CA42, E105, E31x A300, E71x, N500, N600, N620, R2xx, R210, R210s, T100, T400, T500, V20x, X42x
USB	SAM-V200	Samsung	C100, C200, C200N, C207, C210, C225, C230, D41x, D210, D410, D415, C20x, E105, E300, E310, E315, E316, E317, E320, E400, E600, E610, E710, E715, E31x A300, E710, E715, E71x, N500, N700, P100, P107, P400, R2xx, S200, S300, S300M, S307, S600, T100, V200, V200c, V205, V206, V20x, X105, X120, X140, X200, X308, X400, X426, X427, X430, X427M, X42x, X450, X470, X475, X480, X610
USB	SAM-E700	Samsung	E630, E638, E800, SGH-D488, D500, D600, SGH-E100, SGH-E330, SGH-E700, SGH-E708, SGH-E800, SGH-E808, SGH-E820, SGH-S500, SGH-S508, SGH-X100, SGH-X108, SGH-X460, SGH-X490, SGH-X600, SGH-X608, SGH-X630, SGH-X640, X460, X497, X466, X610, X620, E640, X700, X800
USB	SAM-A630/A850	Samsung	A630/A850 Samsung A630, A850, A860, A900, A930, A950, A970, A990
USB	SAM-T809	Samsung	SGH-D806, SCH-R510 Wafer, SCH-U420 Nimbus, SGH-D807, SGH-D820, SCH-U740 Alias, SGH-A436, SGH-T809, SGH-A437, SGH-A707 Sync, SGH-A717, SGH-A727, SGH-D800, SGH-D830, SGH-D840, SGH-D900 Black Carbon, SGH-E250, SGH-E900, SGH-F300, SGH-i607 BlackJack, SGH-P300, SGH-T219, SGH-T329 Stripe, SGH-T509, SGH-T519 Trace, SGH-T629, SGH-U300, SGH-U600, SGH-X820, SGH-X830, SGH-Z510, SGH-Z540, SPH-A303 Heat, SPH-A503 Drift, SPH-M610, SPH-M620 Upstage, T809, D807, D820
USB	LG VX-7000	LG	AX-390, UX-390, AX-4270, VX-4750, UX-4750, VX-4650, VX-4700, AX-5000, UX-5000, LX-125, LX-225, PM-225, LX-325, PM-325, LX-350, LX-535, MM-535, LX-550, FUSIC, VI-125, VX-3200, VX-3300, VX-3280, VX-5200, VX-6200, VX-6100, VX-8000, VX-9800, AX140, AX145, AX355, UX355, AX490, VX1000 MIGO, VX7000
USB	LG-KG800/8500	LG	AX380 WAVE, AX8600, CHOCOLATE AX275, CU575 TRAX, KE970 SHINE, KG320, KG800, KG810, KG90, LX150 KE800, LX570 MUZIQ, U830, U970 SHINE, VX8350, VX8500, VX8550 CHOCOLATE, VX8600, VX8700, VX9400, VX990 ENV, VX-9900
Serial	LG-7020	LG	1100, 1400, 1600, 2120, 3300, 4010, 5130, 5500, 5600, 6070, 6360, 6760, 7000, 7020, 7030, 7050, 7070, 7130, 8180, 8380, A7150, B2000, B2100, C1100, C1200, C1300, C1300I, C1400, C1500, C2100, C2200, C3100, C3300, C3310, C3320, C3400, E5100, F1200, F2100, F2300, F2400, F2410, G1400, G1600, G1610, G220, G4010, G4050, G5500, G5600, G7000, G7020, G7030, G7050, L1100, L1200, L1400, L5100, LX1200, LX5550, M4300, M4400, M4410, T510, T5100, VX5450, VX5550, VX6000, VX6100, VX7000, VX8000, VX8100, W7000, W7020, W800
Serial	LG-2030	LG-2030	510, 1010, 2030, 2130, 4NE1, LX5350, TM-510, TP1100, TP5200, TP5250, TP5350, VX1, VX10, VX2000, VX3100, VX4400, VX4400B
Remote Charger	N/A	Various types	2 AA Batteries Connect USB Cables to Power Devices
Power Adaptor	AC & 12 Volt	N/A	For Use with USB Cables